

Split System Heat Pump

INSTALLATION INSTRUCTIONS

Drip Hood Kit 1.5 - 5.0 ton HP

INTRODUCTION

These instructions are primarily intended to assist qualified individuals experienced in the proper installation of heating and/or air conditioning appliances. Before beginning the installation, read these instructions thoroughly and follow all warnings and cautions in the instructions and on the unit. Improper installation, service, adjustment, or maintenance can cause explosion, fire, electrical shock, or other conditions which may result in personal injury or property damage.

The drip hood kit is designed for use in split system heat pump products. The kit consists of a sheet metal bracket and a screw for mounting. The kit is intended to prevent condensate from dripping onto the control board.

INSTALLATION SEQUENCE


WARNING!

To avoid risk of electric shock, personal injury, or death, disconnect electrical power to the unit before performing any maintenance or service. The unit may have more than one electric power supply.

See the manufacturer's instructions for more installation information.

The installation sequence is as follows:

1. Read these installation instructions completely before proceeding.
2. Disconnect all power to the unit.
3. **Remove access panel from unit:** This will expose the electrical components for the condenser.
4. **Install drip hood:** Using the screw provided and the existing hole in the control panel attach the drip hood to the control panel. See figure below.
5. Install the access panel and apply power to the unit. The system is now ready for operation.

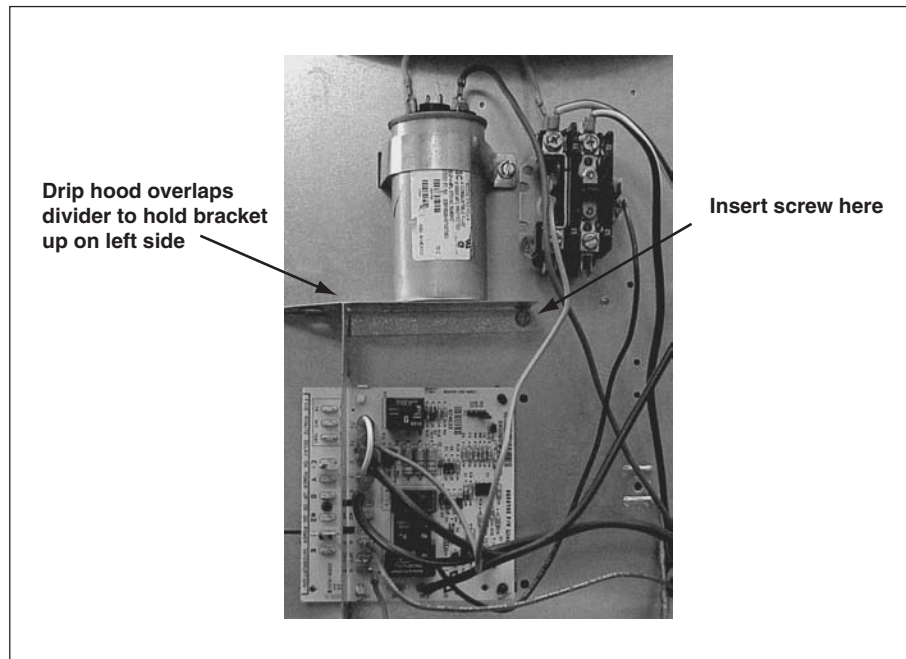

Driphood Installation Location

7084330

