


# WIRING DIAGRAM

(\*R4G\*-090\* Series 208-230/460/575 Volt Three Phase 60 Hz.

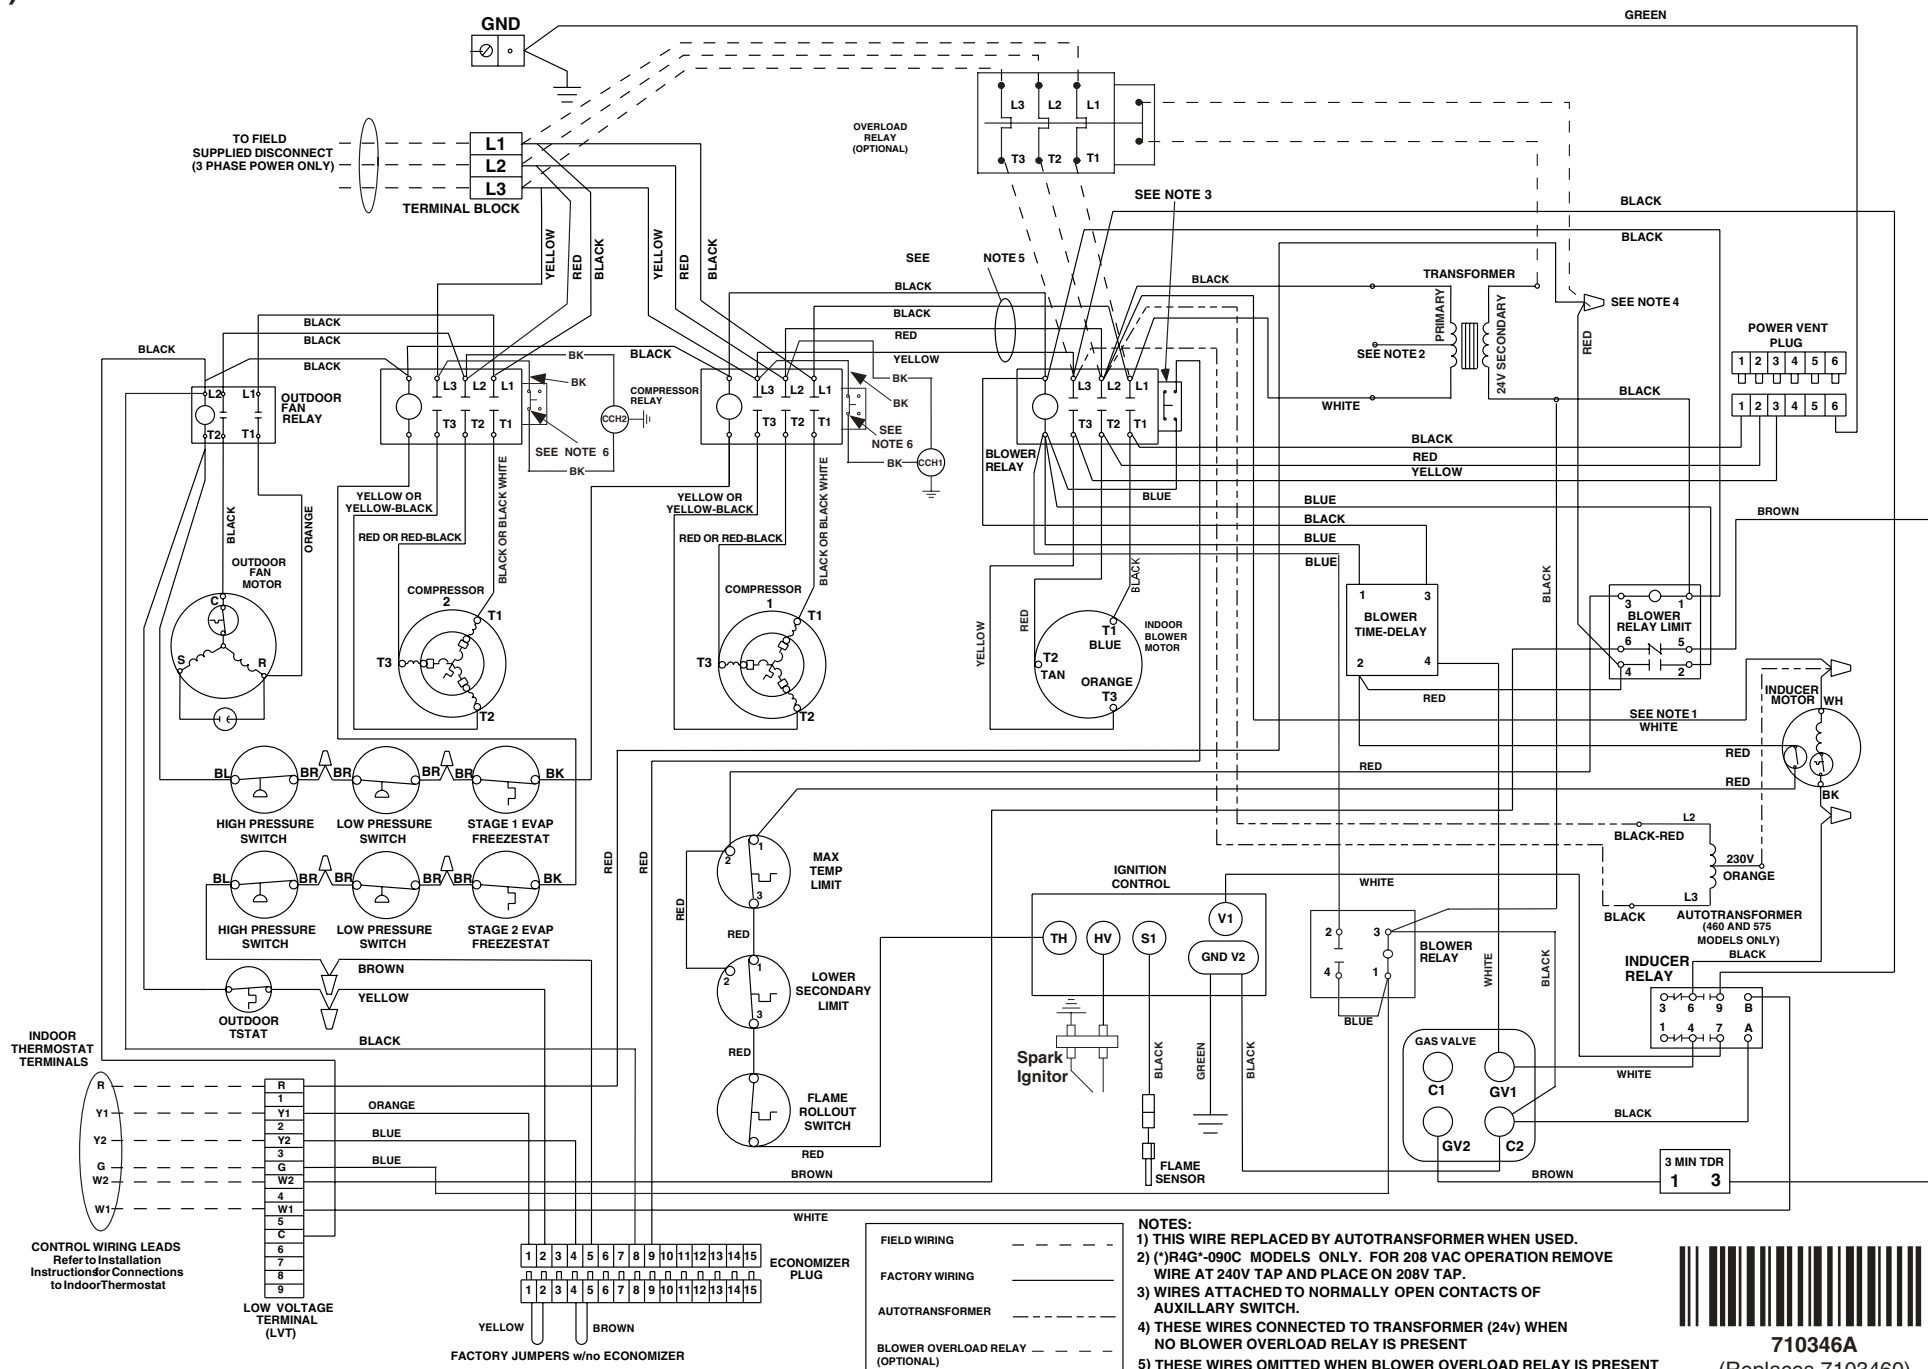

- NOTES:**
- 1) THIS WIRE REPLACED BY AUTOTRANSFORMER WHEN USED.
  - 2) (\*R4G\*-090C MODELS ONLY. FOR 208 VAC OPERATION REMOVE WIRE AT 240V TAP AND PLACE ON 208V TAP.
  - 3) WIRES ATTACHED TO NORMALLY OPEN CONTACTS OF AUXILIARY SWITCH.
  - 4) THESE WIRES CONNECTED TO TRANSFORMER (24v) WHEN NO BLOWER OVERLOAD RELAY IS PRESENT
  - 5) THESE WIRES OMITTED WHEN BLOWER OVERLOAD RELAY IS PRESENT
  - 6) WIRES ATTACHED TO NORMALLY CLOSED CONTACTS OF AUXILIARY SWITCH.



**710346A**  
(Replaces 7103460)