

	CFM		SWITCH NUMBER						
	LOW	HIGH	1	2	3	4	5	6	7
NOMINAL COOLING SPEED	500	720	0	0	0	1			
	550	800	0	0	0	0			
	610	880	0	0	1	0			
	650	945	1	0	0	1			
	720	1050	1	0	0	0			
	800	1155	1	0	1	0			
	900	1305	0	1	0	1			
	1000	1450	0	1	0	0			
	1060	1530	1	1	0	1			
	1100	1595	0	1	1	0			
	1170	1700	1	1	0	0			
	1290	1870	1	1	1	0			

FOR SINGLE STAGE COOLING, USE HIGH CFM COLUMN  
1 = ON      0 = OFF

## Variable Speed Blower

CFM	SWITCH NUMBER						
	1	2	3	4	5	6	7
720					0	0	1
900					0	0	0
1056					1	0	1
1200					1	0	0
1350					0	1	1
1500					0	1	0
1656					1	1	1
1800					1	1	0

1 = ON      0 = OFF



7103610 (Replaces 710058B)

	CFM		SWITCH NUMBER						
	LOW	HIGH	1	2	3	4	5	6	7
NOMINAL COOLING SPEED	500	720	0	0	0	1			
	550	800	0	0	0	0			
	610	880	0	0	1	0			
	650	945	1	0	0	1			
	720	1050	1	0	0	0			
	800	1155	1	0	1	0			
	900	1305	0	1	0	1			
	1000	1450	0	1	0	0			
	1060	1530	1	1	0	1			
	1100	1595	0	1	1	0			
	1170	1700	1	1	0	0			
	1290	1870	1	1	1	0			

FOR SINGLE STAGE COOLING, USE HIGH CFM COLUMN  
1 = ON      0 = OFF

## Variable Speed Blower

CFM	SWITCH NUMBER						
	1	2	3	4	5	6	7
720					0	0	1
900					0	0	0
1056					1	0	1
1200					1	0	0
1350					0	1	1
1500					0	1	0
1656					1	1	1
1800					1	1	0

1 = ON      0 = OFF



7103610 (Replaces 710058B)

	CFM		SWITCH NUMBER						
	LOW	HIGH	1	2	3	4	5	6	7
NOMINAL COOLING SPEED	500	720	0	0	0	1			
	550	800	0	0	0	0			
	610	880	0	0	1	0			
	650	945	1	0	0	1			
	720	1050	1	0	0	0			
	800	1155	1	0	1	0			
	900	1305	0	1	0	1			
	1000	1450	0	1	0	0			
	1060	1530	1	1	0	1			
	1100	1595	0	1	1	0			
	1170	1700	1	1	0	0			
	1290	1870	1	1	1	0			

FOR SINGLE STAGE COOLING, USE HIGH CFM COLUMN  
1 = ON      0 = OFF

## Variable Speed Blower

CFM	SWITCH NUMBER						
	1	2	3	4	5	6	7
720					0	0	1
900					0	0	0
1056					1	0	1
1200					1	0	0
1350					0	1	1
1500					0	1	0
1656					1	1	1
1800					1	1	0

1 = ON      0 = OFF



7103610 (Replaces 710058B)