

WIRING DIAGRAM


H3HK005H-01B (without circuit breaker)

3kW, 5kW, 1-Phase Electric Heater Kit

H4HK005H-11B (with circuit breaker)

H4HK003H-01B (without circuit breaker)

H4HK005H-01B (without circuit breaker)

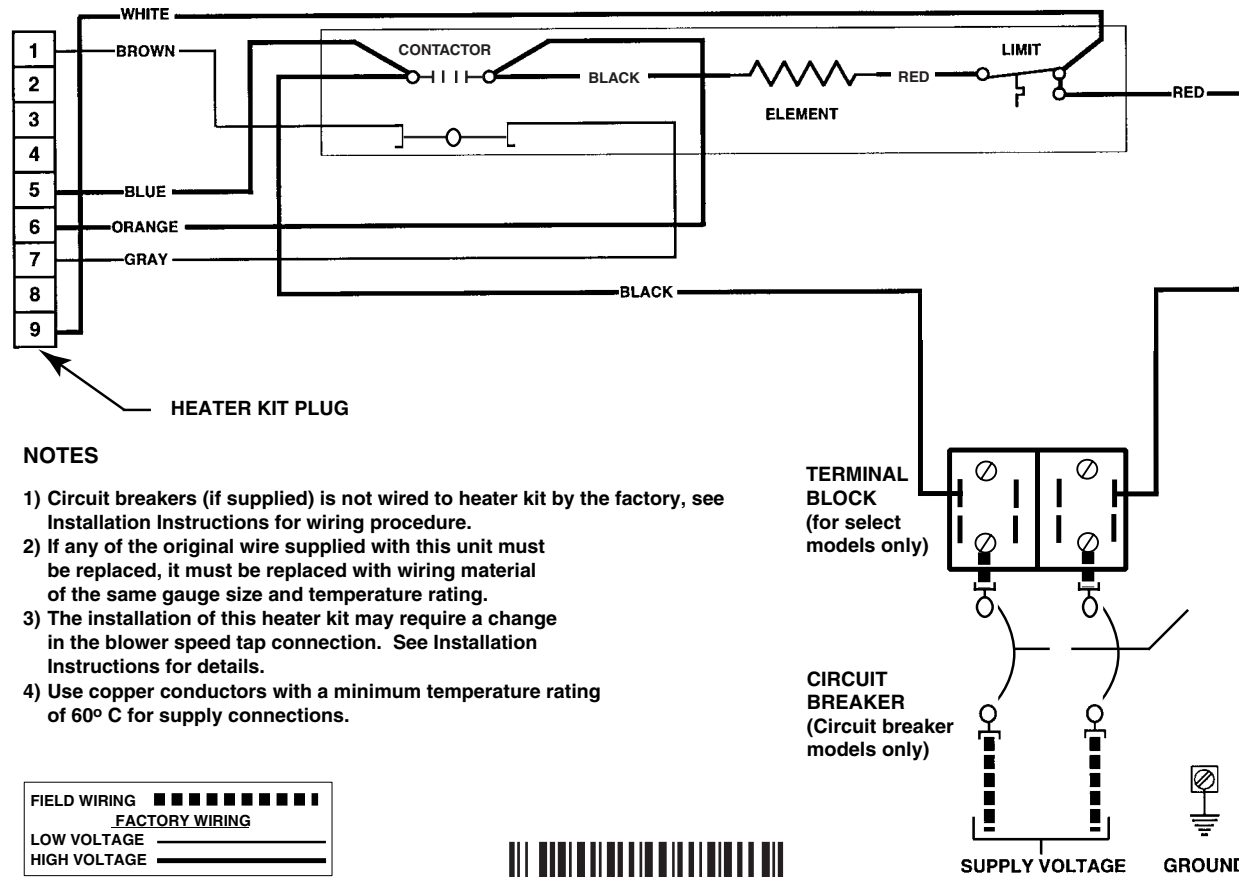

NOTES

- 1) Circuit breakers (if supplied) is not wired to heater kit by the factory, see Installation Instructions for wiring procedure.
- 2) If any of the original wire supplied with this unit must be replaced, it must be replaced with wiring material of the same gauge size and temperature rating.
- 3) The installation of this heater kit may require a change in the blower speed tap connection. See Installation Instructions for details.
- 4) Use copper conductors with a minimum temperature rating of 60° C for supply connections.

FIELD WIRING	■■■■■■■■■■
FACTORY WIRING	—————
LOW VOLTAGE	—————
HIGH VOLTAGE	—————



710394A