

Gasket Kit

Installation Instructions

For G6/L1 Furnace

APPLICATION OF GASKET KIT FOR COMPLIANCE TO TITLE 24

1. Turn off electric and gas supply to the furnace.
2. Remove the blower door from the furnace and set screws aside.
3. Apply gasket to the sides and bottom surface of the furnace as noted in Figure 1.
4. Replace the blower door and replace screws.
5. Re-apply electric and gas supply to the furnace.

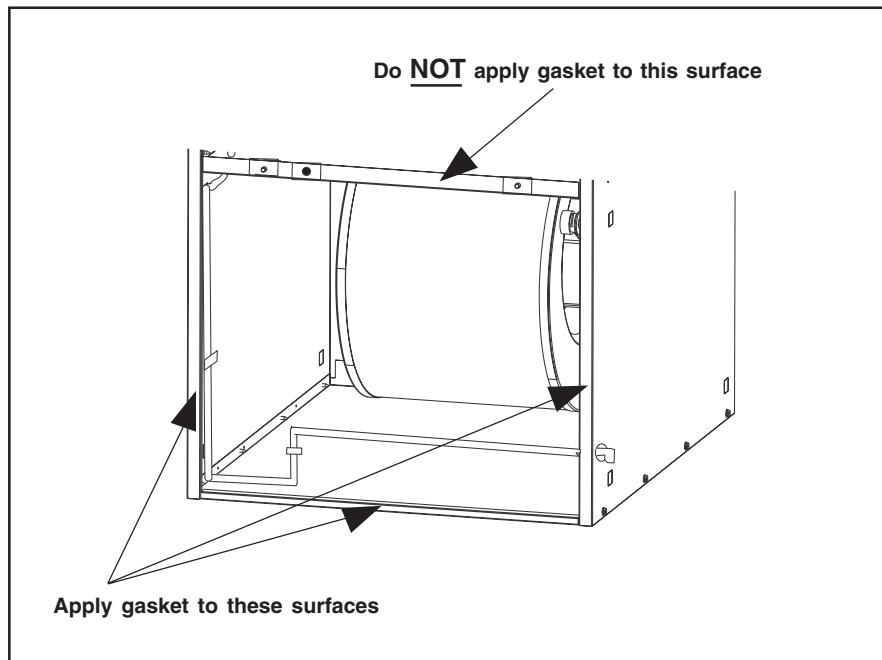


Figure 1. Gasket Installation



7084400

7084400

Specifications and illustrations subject to change without notice and without incurring obligations. Printed in U.S.A. (05/05)

Gasket Kit

Installation Instructions

For G6/L1 Furnace

APPLICATION OF GASKET KIT FOR COMPLIANCE TO TITLE 24

1. Turn off electric and gas supply to the furnace.
2. Remove the blower door from the furnace and set screws aside.
3. Apply gasket to the sides and bottom surface of the furnace as noted in Figure 1.
4. Replace the blower door and replace screws.
5. Re-apply electric and gas supply to the furnace.

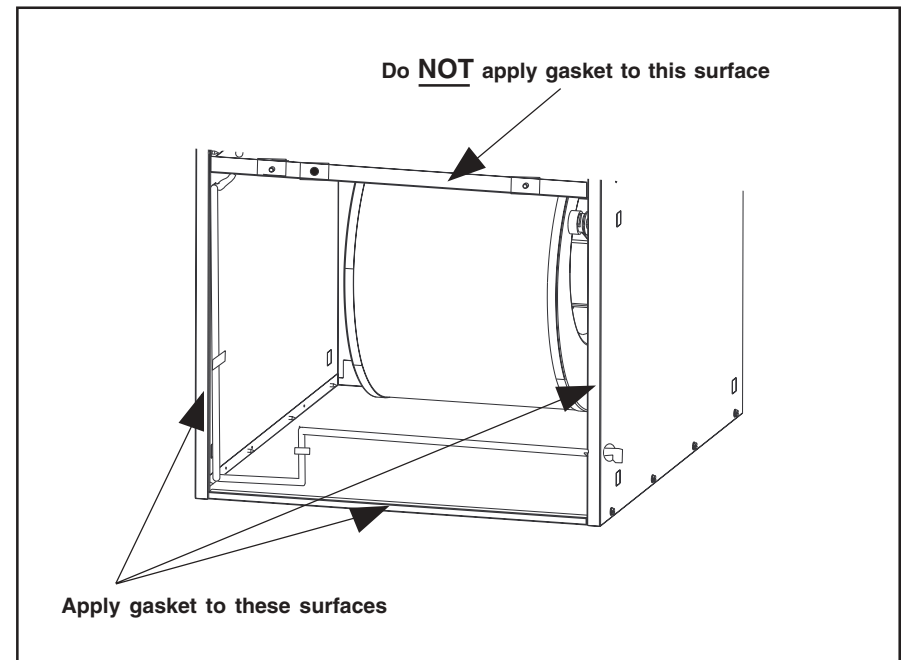


Figure 1. Gasket Installation



7084400

7084400

Specifications and illustrations subject to change without notice and without incurring obligations. Printed in U.S.A. (05/05)