

# WIRING DIAGRAM

## Wall Mount Air Handler (8kw, 10kw)

**NOTES:**

1. The blower motor speed tap connection may not be as shown. See the Installation Instructions.
2. Disconnect all power before servicing.
3. Transformer may have a dual voltage primary tap. Match the tap position with the supply voltage used.
4. If the wiring is replaced, use only 105°C copper wire of the same gauge.

