

Motor Settings

B-Cabinet

CFM	Switch Number			
	1	2	3	4
720	0	0	0	1
800	0	0	0	0
860	1	0	0	1
885	0	0	1	0
960	1	0	0	0
1060	1	0	1	0
1125	0	1	0	1
1185	1	1	0	1
1250	0	1	0	0
1315	1	1	0	0
1375	0	1	1	0
1450	1	1	1	0


NOTE: 1 = ON, 0 = OFF

C-Cabinet

CFM	Switch Number			
	1	2	3	4
1075	0	0	0	1
1140	1	0	0	1
1225	0	0	0	0
1300	1	0	0	0
1380	0	0	1	0
1465	1	0	1	0
1555	0	1	0	1
1665	1	1	0	1
1775	0	1	0	0
1900	1	1	0	0
2000	0	1	1	0
2150	1	1	1	0

WIRING DIAGRAM

Variable Speed Air Handler (Converted from Standard Air Handler)

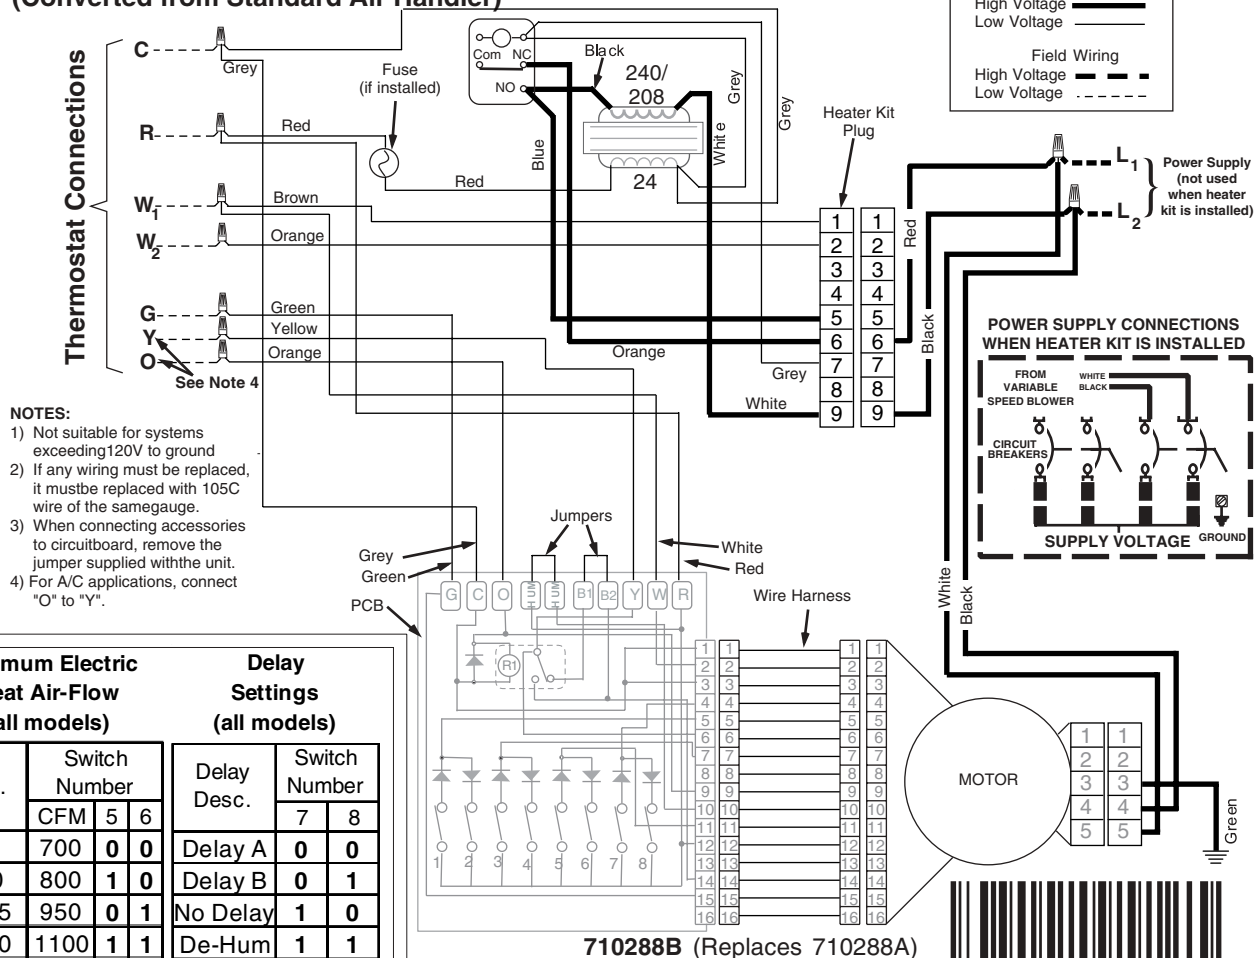

NOTES:

- 1) Not suitable for systems exceeding 120V to ground.
- 2) If any wiring must be replaced, it must be replaced with 105C wire of the same gauge.
- 3) When connecting accessories to circuitboard, remove the jumper supplied with the unit.
- 4) For A/C applications, connect "O" to "Y".

Minimum Electric Heat Air-Flow (all models)

Nom. KW	Switch Number	
	CFM	5 6
0-5	700	0 0
6-10	800	1 0
11-15	950	0 1
16-20	1100	1 1

Delay Settings (all models)

Delay Desc.	Switch Number	
	7	8
Delay A	0	0
Delay B	0	1
No Delay	1	0
De-Hum	1	1