

WIRING DIAGRAM

SMALL PACKAGE HEAT PUMP

208/230 VOLT


60HZ/SINGLE PHASE

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150V to ground.

4. For replacement wires use conductors suitable for 105°C.
5. On models w/no pressure switch Yellow wire connects "Y" & "T1" on Defrost Board.

7. Couper le courant avant de faire letretine.
8. Employez uniquement des conducteurs en cuiver.
9. Ne convient pas aux installations de plus de 150V a la terre.

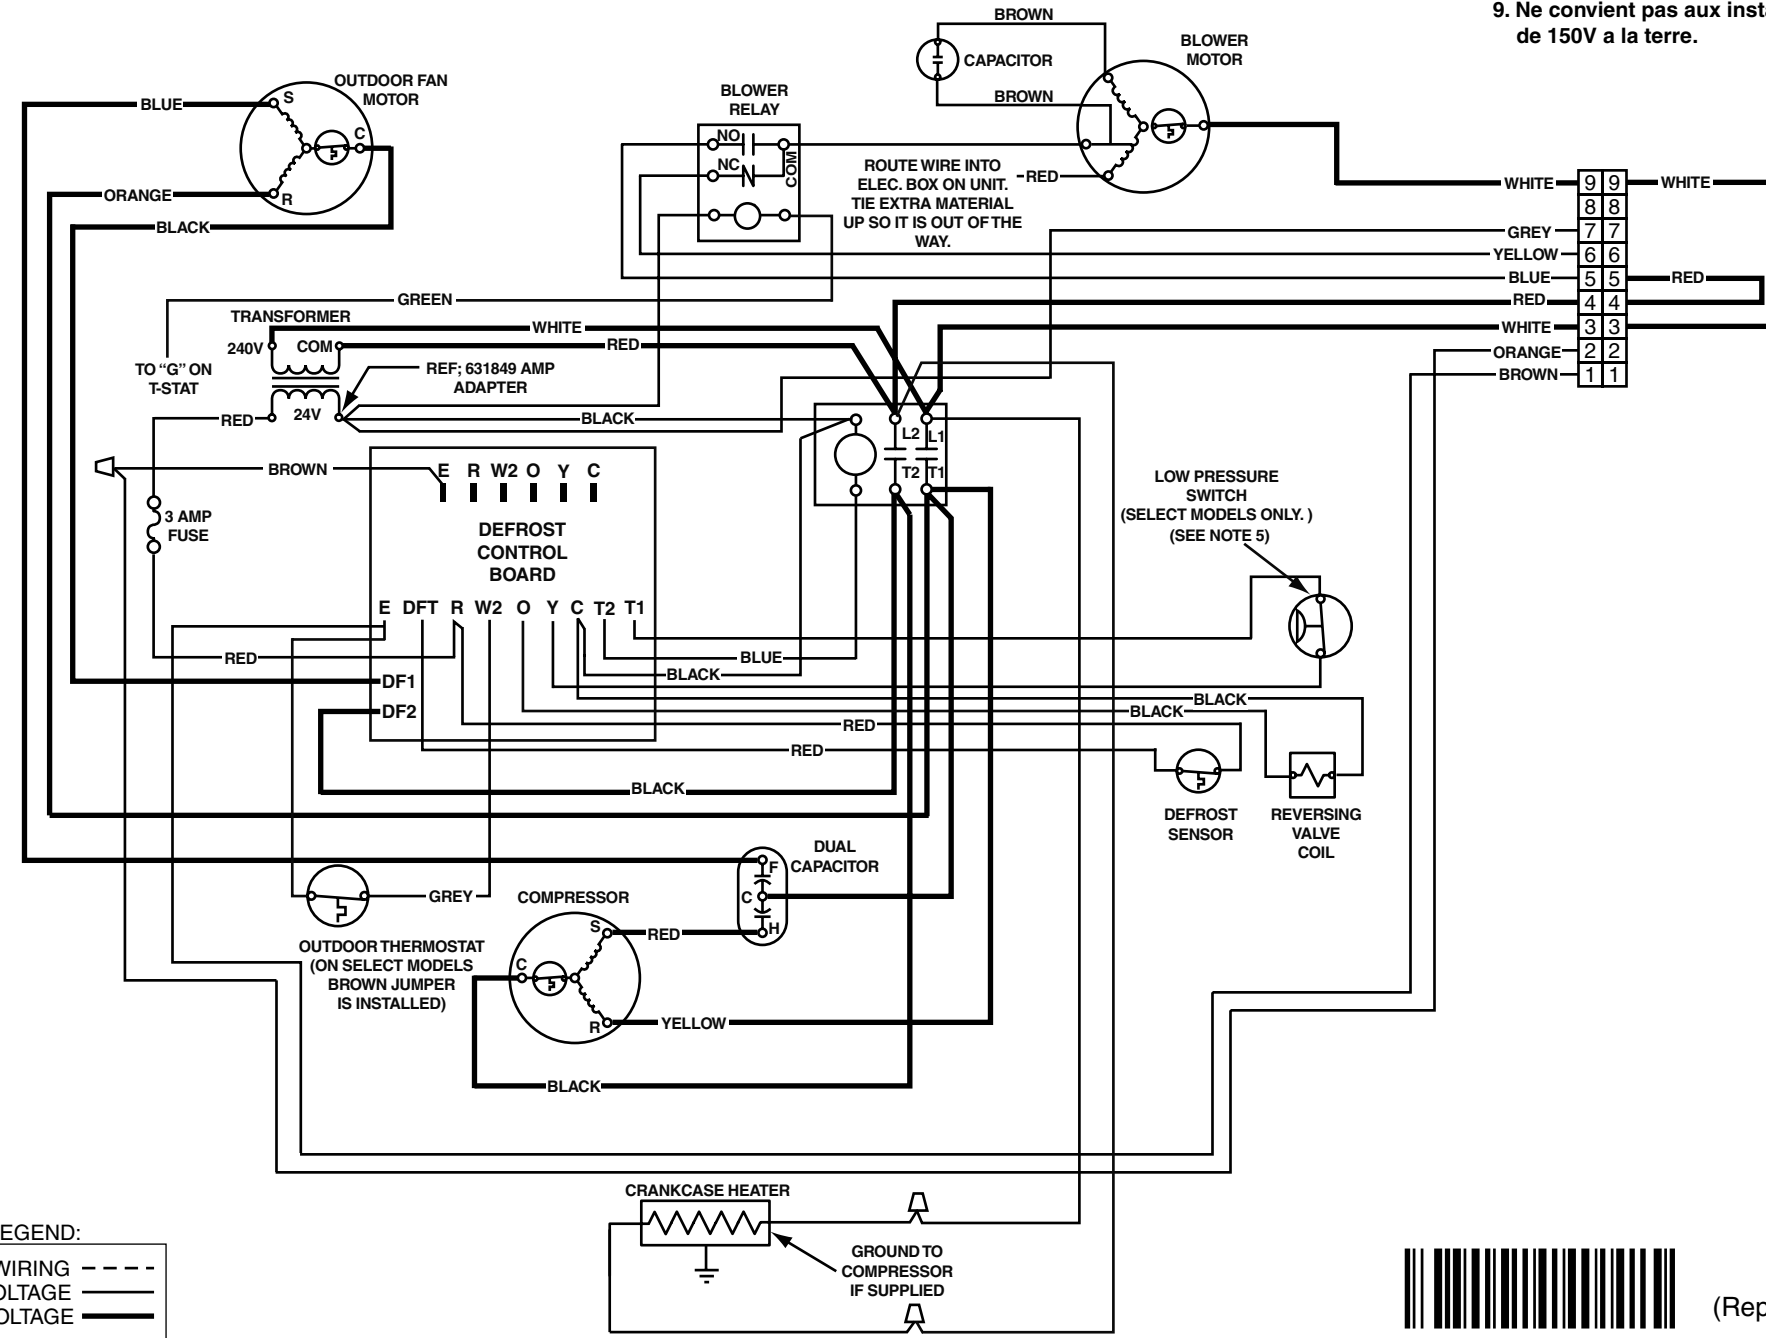

710339C
(Replaces 710339B)

10/07