




WIRING DIAGRAM

Convertible Packaged Gas Heat/Electric Air Conditioner 208/230 Volt Single Phase 60Hz

NOTES:

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150 V to ground.
4. If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C.
5. For supply wire ampacities and overcurrent protection, see unit rating plate.

1. Couper le courant avant de faire letretien.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150 V a la terre.

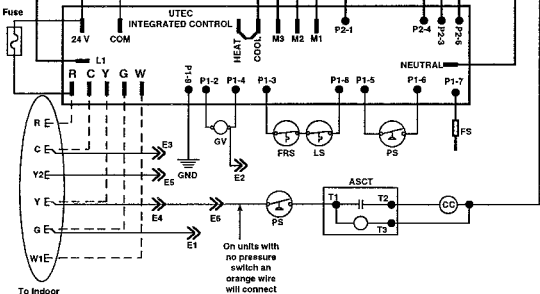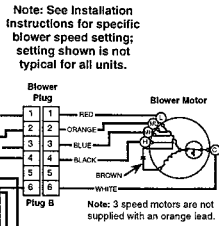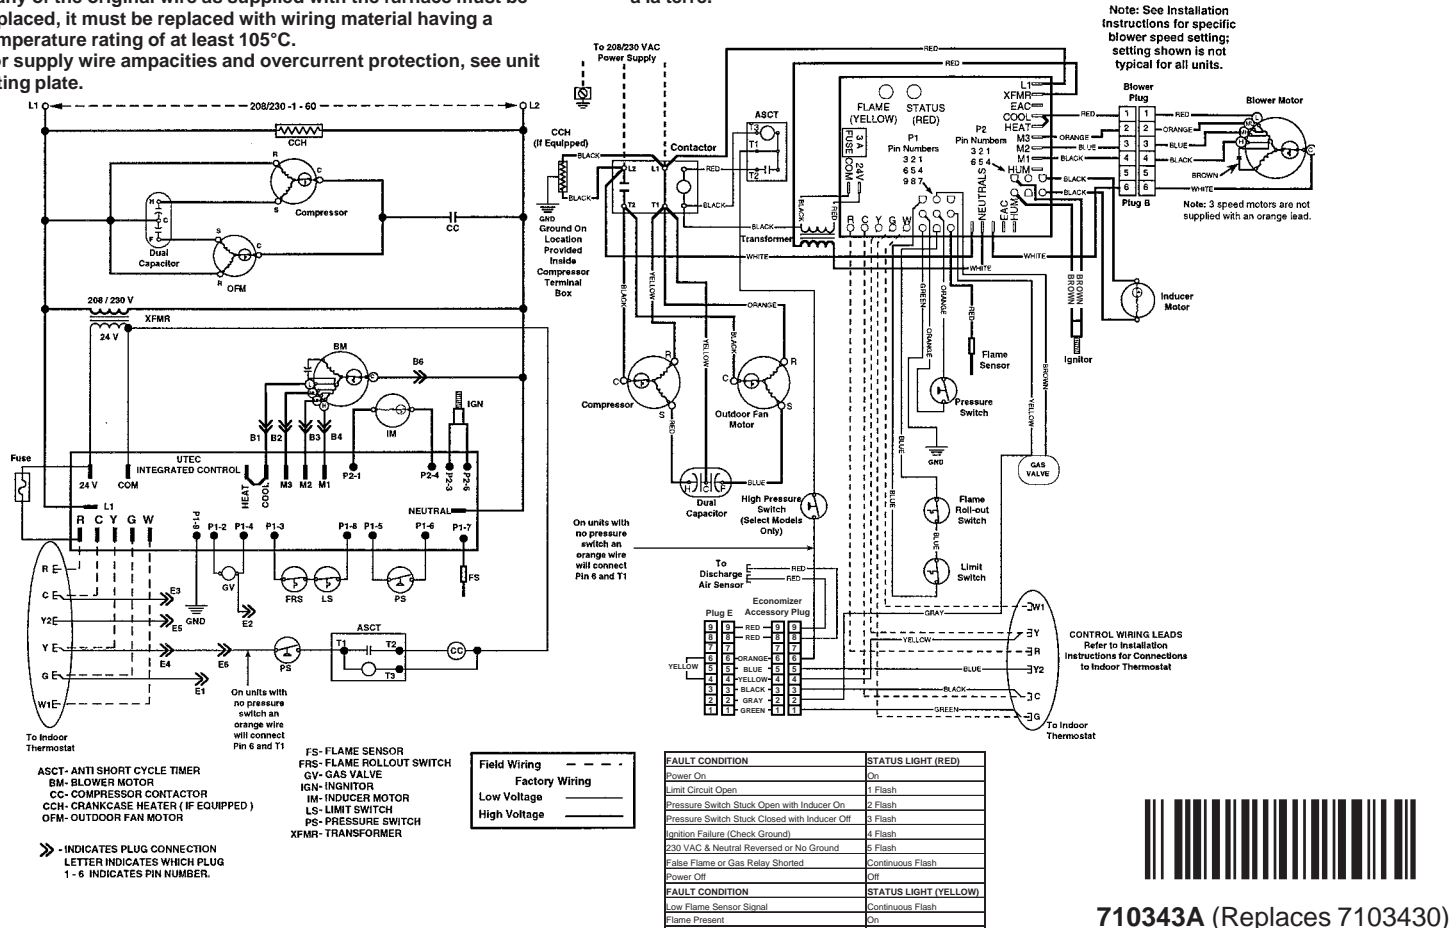

- ASCT- ANTI SHORT CYCLE TIMER
- BM- BLOWER MOTOR
- CC- COMPRESSOR CAPACITOR
- CCH- CRANKCASE HEATER (IF EQUIPPED)
- OFM- OUTDOOR FAN MOTOR
- FS- FLAME SENSOR
- FRS- FLAME ROLLOUT SWITCH
- GV- GAS VALVE
- IGN- IGNITOR
- IM- INDUCER MOTOR
- LS- LIMIT SWITCH
- PS- PRESSURE SWITCH
- XFMR- TRANSFORMER

Field Wiring	---
Factory Wiring	---
Low Voltage	---
High Voltage	---

FAULT CONDITION	STATUS LIGHT (RED)
Power On	On
Limit Circuit Open	1 Flash
Pressure Switch Stuck Open with Inducer On	2 Flash
Pressure Switch Stuck Closed with Inducer Off	3 Flash
Ignition Failure (Check Ground)	4 Flash
230 VAC & Neutral Reversed or No Ground	5 Flash
False Flame or Gas Relay Shorted	Continuous Flash
Power Off	Off
FAULT CONDITION	STATUS LIGHT (YELLOW)
Low Flame Sensor Signal	Continuous Flash
Flame Present	On



710343A (Replaces 7103430)