


INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS CONCENTRIC CURB TRANSITION 547869 / 547878

FORM# 611A-0298

The Concentric Curb Transition is designed to drop into the curb and convert the square duct unit connections to round duct. For use with 547860, 547861, 547862, & 547863 roof curbs.

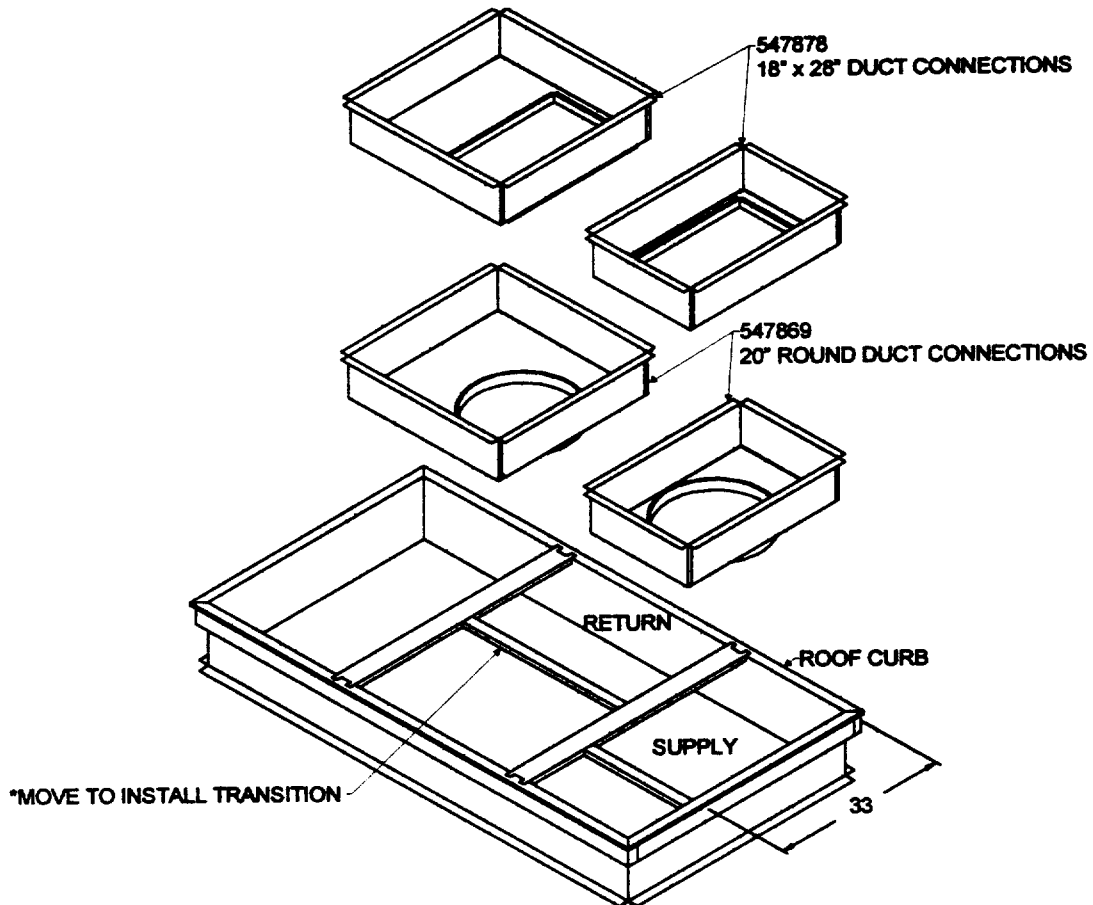

547869	20" ROUND
547878	18" X 28" RECTANGLE

STEP 1:

Check for correct part number listed above:

STEP 2:

Attach duct to transition duct connections.

STEP 3:

Move the noted duct support to match the 33" dimension.

STEP 4:

Install transition in supply/return opening in roof curb as shown so the duct work will line up with concentric diffusers.