

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS MODEL 555617 / 555618 / 555619 / 555620 R4GM - 150-180

FORM# 643B-0504

This Roof Curb is NRCA approved and is constructed of 18 gauge galvanized steel with a full perimeter 2" x 4" wood nailer strip. The curb is designed to be used with the Cooling, Gas Electric, and Heat Pump Models. The curb is shipped with the following parts, as shown in Figure 2:

- 1) 2 ea. Curb Short Sides - 70 $\frac{9}{16}$ " Long (A)
- 2) 2 ea. Curb Long Sides - 77 $\frac{1}{2}$ " Long (B)
- 3) 1 ea. Condensor Pans - 74 x 15 $\frac{3}{16}$ " (C)
- 4) 1 ea. Condensor Pans - 74 x 13 $\frac{5}{16}$ " (D)
- 5) 1 ea. Hardware Package Includes:
 - 4 ea. "Hinge" Pins $\frac{3}{16}$ "
 - 110 ea. Hex Washers screws #10 x $\frac{1}{2}$ "
- 6) 3 ea. Gasket $\frac{3}{4}$ " x 1 $\frac{1}{4}$ " x 14' (28 ft. total)

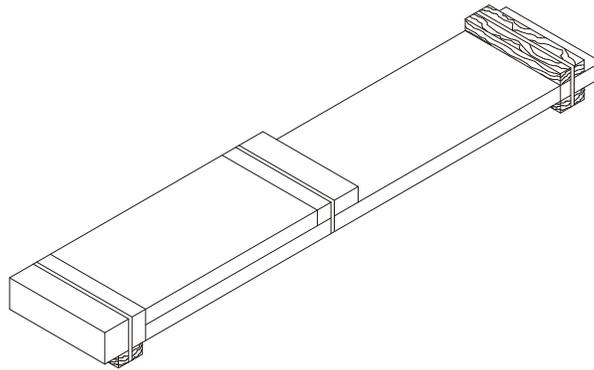


Figure 1

Step 1:

Curb Package is shown as shipped with easy to identify part numbers on all sides. Cut shipping bands and remove Hardware, Gasket, and 2 Condensor Pans.

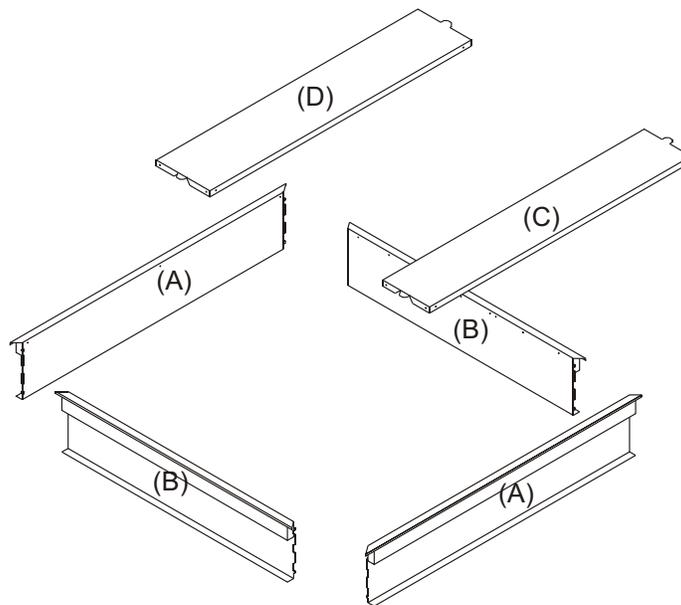


Figure 2

Step 2:

Layout the curb pieces before assembly to insure that all the necessary pieces are included.

U.S. PATENT 5148647

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS
MODEL 555617 / 555618 / 555619 / 555620
R4GM - 150-180

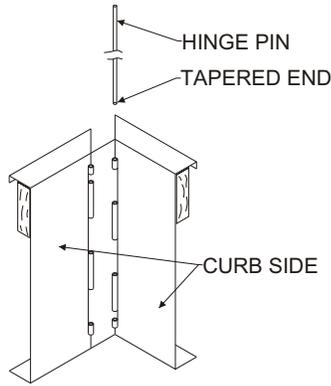


Figure 3

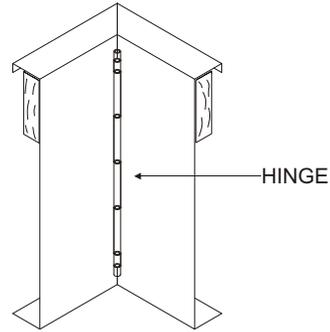


Figure 4

Step 3:

Corner Assembly: Align each curb side as shown in Figure 3. Using a hammer, drive the curb "hinge" pin down until the top of the pin is below the top of the curb as shown in Figure 4.




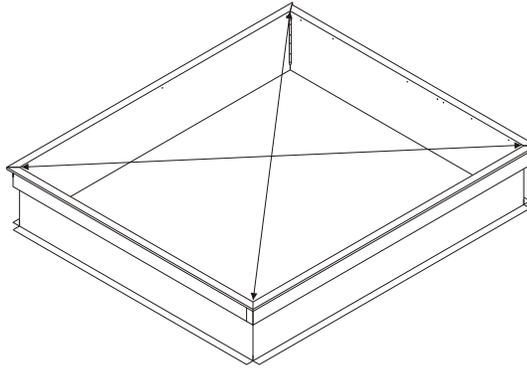


Figure 5

Step 4:

After the four corners are assembled; the curb should be checked to be sure it is in "square". Do this by measuring diagonally from each opposite corner see Figure 5. The two measurements should be the same for each direction.

DETAILS

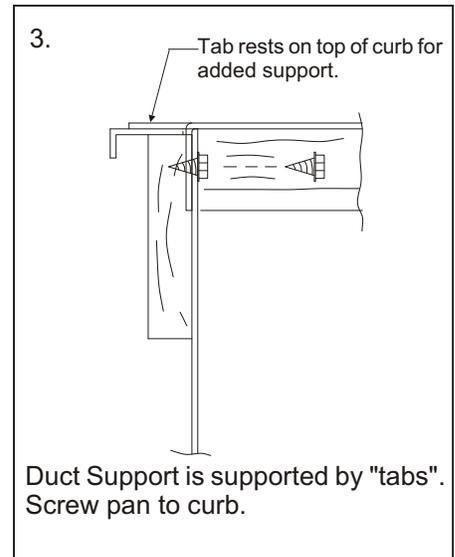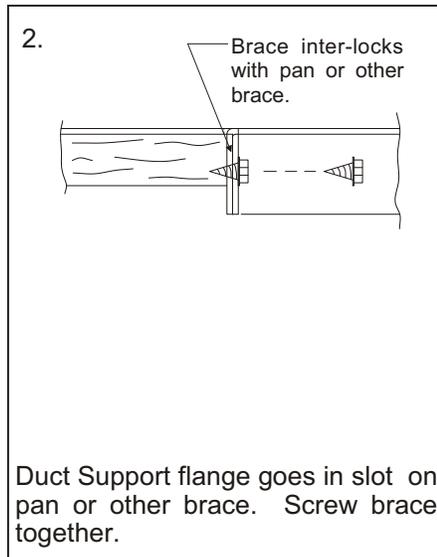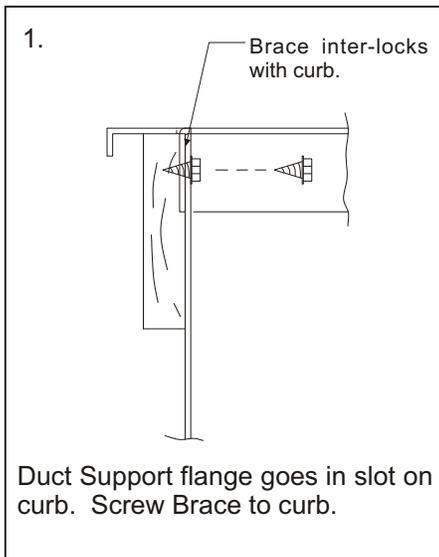

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS
 MODEL 555617 / 555618 / 555619 / 555620
 R4GM - 150-180

Note:

Condenser Pans can be located on either end depending on individual applications.

Step 5:

Install the condenser pan (C) as shown with opening over the desired duct location as shown in Figure 6.

Step 6:


Install the condenser pan (D) as shown in Figure 6.

Step 7:

If the curb is being assembled and moved to another location, attach the condenser pans as shown in "Details".

Step 8:

Place the 3/4" x 1 1/4" Gasket on all of the top edges of the roof curb, including the condenser pans.

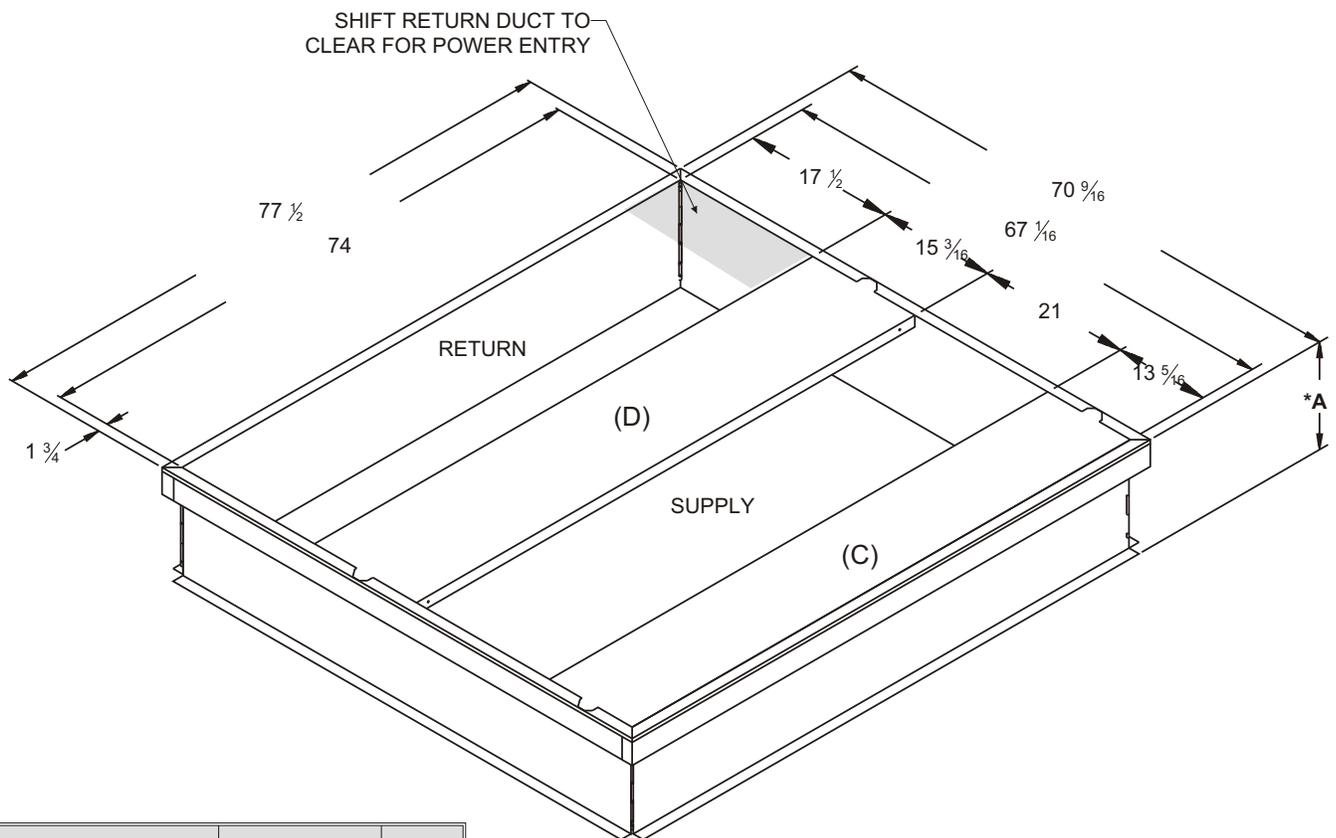

NORDYNE PART#	RSI PART#	A
555617	47-201-1008	8
555618	47-201-1014	14
555619	47-201-1018	18
555620	47-201-1024	24

ROOF OPENING:
 74" Long
 55" Wide

DUCT SIZES ARE:
 Return 68 1/2 x 17 1/4
 Supply 73 1/2 x 20 1/2

Figure 6

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS
MODEL 555617 / 555618 / 555619 / 555620
R4GM - 150-180

ROOF INSTRUCTIONS

